

## ROTORFLUSH FILTERPUMPS

### Nauti Range Models: N9316 – N9916

## USE AND MAINTENANCE INSTRUCTION MANUAL TO BE KEPT BY THE USER

### **ATTENTION!**

**For three phase pumps it is imperative that electrical connections are made so that the impellers rotate in the correct direction. If the pumps are run in the wrong direction for more than a few seconds serious damage may result which will invalidate the guarantee.**

Read paragraph 9.3 before installation for the method of checking correct direction of rotation.

Although the filters are self-cleaning there may over time be a build-up of detritus in the pores of the mesh which the self-cleaning mechanism cannot remove.

For stainless steel filter mesh use a pressure washer to very thoroughly clean the outside of the mesh. NOTE: There is no need to remove the mesh to do the maintenance.

For nylon screens either clean low-pressure water or replacement inserts are available from Rotorflush Filters Ltd. NOTE: If the inserts are split or damaged, they MUST be replaced.

**If the pump is run with the filter screen clogged it may cause the pump to overheat and seriously damage the motor invalidating the guarantee. The use of appropriate Cos phi load monitoring and dry running protection is essential with all models.**

In most conditions the filter should be inspected every 2-3 months. In some situations, it may require more frequent inspection and if required cleaning.

Stainless steel screens should be thoroughly cleaned with a pressure washer.

**NB: WATER CONDITIONS VARY – THESE RECOMMENDATIONS ARE BASED ON  
AVERAGE USE IN AVERAGE DIRTY WATER CONDITIONS**

It is recommended that filter screens are maintained at these intervals:

Stainless steel screens:	Pressure wash every 5000 hours of use or every 6 months. 300 micron every 5000 hours of use or every year. 115 micron and 60 micron every 1000 hours of use or 6 monthly whichever occurs first.
Nylon Inserts:	

## Contents

1. MANUFACTURER & PRODUCT IDENTIFICATION DATA (as per EEC98/37 p.1.7.4a)	3
1.1. Manufacturer Data	3
1.2. Filterpump Data	3
2. TECHNICAL ASSISTANCE INFORMATION	3
3. INTRODUCTION	3
4. GENERAL SAFETY WARNINGS	4
4.1. Preventive Measures to be taken by the User	4
4.2. Significant Protection and Precautions (as per EEC 98/37 p. 1.1.2 and 1.7.2; EN 292-2 p.5)	4
5. DESCRIPTION	5
5.1. General Description	5
5.2. Technical and Construction Characteristics	5
6. CONTEMPLATED AND NON-CONTEMPLATED USE	6
6.1. Contemplated Conditions of Use	6
6.2. Non-Contemplated Conditions of Use	6
7. HANDLING AND TRANSPORT (as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5 1.1.a)	6
7.1. Unpacking	6
7.2. Handling and De-installing	6
7.3. Transport	6
8. PREPARATION FOR USE (as per EEC 98/37 p.1.7.4.a, EN 292-2 p.5.1.3)	7
8.1. General information	7
8.2. Electrical connections	7
8.3. Checking the Direction of Rotation	7
9. INSTALLATION (as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5.1.1b)	7
9.1. Fixed Installation	8
9.2. Temporary Installation (for Temporary Use)	9
10. ASSEMBLY AND DISASSEMBLY	9
11. ADJUSTING AND REGISTERING	9
(as per EEC 98/37 p.1.7.4.a)	9
(as per EEC 98/37 p.1.7.4.a; EN 292-2 p.5.5.1.d)	9
12. USE AND START-UP (as per EEC 98/37 p.1.7.4.a; EN 292-2 p. 5.5.1.d)	10
12.1. Starting	10
13. MAINTENANCE AND REPAIRS (as per EEC 98/37 p.1.6; EN 292-2 p.5.5.1.e)	10
13.1. Troubleshooting	11
14. TECHNICAL INFORMATION (as per EEC 98/37 p.1.1.2 and 1.7.2; EN 292-2 p.)	12
14.1. Diagram of Filterpump Dimensions and Weights	12
14.2. Diagram for Installation with Minimum Functional Distances	13
14.3. Pump Motor Data	13
14.4. Pump Motor and Efficiency Data	14
14.5. Filter Pump Construction	15
14.6. Self-cleaning Filter Construction	15
14.7. Rating Plate Example	16
15. INFORMATION ON AIR-BORNE NOISE (as per EEC 89/392 p. 1.7.4.f)	17
16. WASTE DISPOSAL	17
17. DECLARATION OF CONFORMITY	17

## ROTORFLUSH FILTERPUMPS: Models: N9316 – N9916

### 1. MANUFACTURER & PRODUCT IDENTIFICATION DATA (as per EEC98/37 p.1.7.4a)

#### 1.1. Manufacturer Data

Rotorflush Filters  
Langmoor Manor  
Charmouth  
Bridport  
Dorset  
DT6 6BU  
England

Telephone:+44 (0) 1297 560110

Fax:+44 (0) 1297 560110

Email: [mail@rotorflush.com](mailto:mail@rotorflush.com)

#### 1.2. Filterpump Data

Description: Submersible Pump with integral Self-cleaning Intake screen. Referred to as a 'Filterpump' within this document.

Models: N5616 N9316, N9416, N9516, N9616, N9716, N9816 and N9916

### 2. TECHNICAL ASSISTANCE INFORMATION

If a malfunction of the Filterpump is not covered in the TROUBLESHOOTING table (Section 14.1) contact Rotorflush Filters at the above address.

### 3. INTRODUCTION

This publication contains necessary information and instructions for the use and maintenance of your Rotorflush Filterpump.

Follow the advice given to ensure correct operation and optimum performance of the Filterpump. For any other information, please contact Rotorflush Filters

***THESE INSTRUCTIONS AND ILLUSTRATIONS ARE SUBJECT TO COPYRIGHT AND MUST NOT BE COPIED IN WHOLE OR IN PART***

#### 4. GENERAL SAFETY WARNINGS

***FAILURE TO OBSERVE THESE WARNINGS AND/OR ANY TAMPERING WITH THE FILTERPUMP EXEMPTS ROTORFLUSH FILTERS FROM ALL RESPONSIBILITY IN THE EVENT OF PERSONAL INJURY OR DAMAGE TO EQUIPMENT OR PROPERTY AND/OR TO THE FILTERPUMP***

Read this manual carefully and check to ensure that the Filterpump has been properly installed and connected in accordance with relevant safety standards before starting the Filterpump.

There are no RESIDUAL RISKS with Rotorflush Filterpumps.

No particular technical skills are required to use Rotorflush Filterpumps, although installation must be carried out by a qualified electrician.

No personal safety devices (precaution devices) are required to use Rotorflush Filterpumps.

##### 4.1. Preventive Measures to be taken by the User



a) The user must specifically comply with all the accident prevention regulations in force in the respective countries in which the Filterpump is being used; the indications given in Section 7 must be scrupulously followed.

**b) During operation make sure that nobody is in the water**



c) Before undertaking any repairs or maintenance to the Filterpump, isolate the electricity supply by disconnecting the pump and/or turning off the switch (if provided). This will prevent accidental starting which could cause personal injury or damage to equipment or property.

d) Any maintenance operation, installation or moving the Filterpump with the electrical system live may cause serious injury and could prove fatal.

e) During operation, avoid moving the Filterpump.

f) Before using the Filterpump, always check that the cable and all electrical devices are in perfect working order.

g) When starting up the Filterpump (by turning on the switch, if provided, or by connecting the pump to the power supply ensure (i) you do not have wet hands (ii) you are not standing in water and (iii) you are not barefoot.

h) The user must not carry out under his/her own initiative any operations or tasks not contemplated in this manual.

##### 4.2. Significant Protection and Precautions (as per EEC 98/37 p. 1.1.2 and 1.7.2; EN 292-2 p.5).



Rotorflush Filterpumps are designed so that all moving parts are shrouded by protective casings. Rotorflush Filters Ltd declines all responsibility in the event of injury or damage caused as a result of tampering with these devices.



Each lead or live part is electrically insulated to earth; there is also a further safety device in that the accessible conductive parts are connected to an earth lead so that the parts within reach cannot become dangerous in the event of failure of the principal insulation.

## 5. DESCRIPTION


### 5.1. General Description

Rotorflush Nauti Range Filterpumps are all similar from the functional and constructive point of view; the only differences are the following:

- Power
- Flow rate
- Head
- Weight
- Dimensions

Rotorflush Nauti Filterpumps are used for handling water containing total suspended solids not greater than 1,000 mg/litre dry weight at temperatures up to 40°C (Section 7.1). Unwanted solids are separated by a self-cleaning filter which is continuously backwashed with filtered water pumped through a dual-headed rotor by a secondary impeller mounted on an extended impeller shaft attached to the pump.

They may be used for fixed or temporary installations, with or without automatic start. Rotorflush Filterpumps are designed for long life and constant performance if used according to the instructions given in Sections 8, 14 and 15.

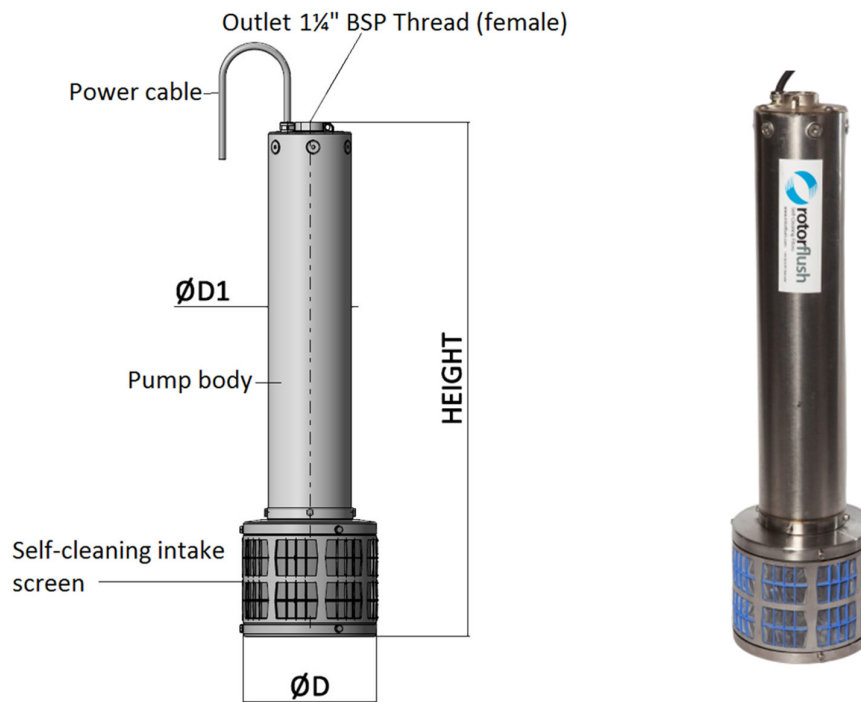

### 5.2. Technical and Construction Characteristics

Rotorflush Filterpumps are designed and built to the following design and construction standards:

Machine 98/037/EEC; EN292 standard

Low Voltage 73/23/EEC and relative additions EN60335-1 and EN 60335-2-41 standards

Electromagnetic Compatibility 89/336/EEC and relative additions EN50081-1 and 2 standards

## 6. CONTEMPLATED AND NON-CONTEMPLATED USE

### **WARNING**

Failure to respect the prescribed limits constitutes a situation of use that is technically improper and may endanger the safety of persons and thus EXEMPTS ROTORFLUSH FILTERS FROM ANY RESPONSIBILITY IN THE EVENT OF ACCIDENTS TO PERSONS OR DAMAGE TO EQUIPMENT OR PROPERTY AND/OR TO THE FILTERPUMP, THEREBY RENDERING THE GUARANTEE INVALID.

### 6.1. Contemplated Conditions of Use

Rotorflush Filterpumps are suitable for pumping water, non-aggressive and compatible with materials used to construct the pump. Max density 1.1 kg/dm<sup>3</sup> with a total suspended solid loading not exceeding 1000mg/litre dry weight. Oily/fatty/sticky solids will reduce filter performance. They can be used with pressurisation units. Use the Filterpump in keeping with its technical characteristics (Section 14).

### 6.2. Non-Contemplated Conditions of Use

Rotorflush Filterpumps must not be installed in swimming pools, garden ponds and similar environments where and when people are in the water. For pumping fluids having a total suspended solid loading of more than 1,000 mg/litre dry weight. **Rotorflush Filterpumps must never be run without water.**

## 7. HANDLING AND TRANSPORT (as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5 1.1.a)

### 7.1. Unpacking

Check that there are no breakages or severe dents in the packing; if there are, point this out immediately to the person who delivers the material. After removing the Filterpump from the packaging, check that it has not suffered any damage during transit; if damage is found, inform the supplier immediately. Check that the specifications stated on the plate of the Filterpump are the same as you requested in your order.

### 7.2. Handling and De-installing



#### **WARNING**



**FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE THE FILTERPUMP TO FALL AND SUFFER SEVERE DAMAGE. NEVER UNDER ANY CIRCUMSTANCES USE THE POWER CABLE TO LIFT OR DRAG THE FILTERPUMP. USE THE CORRECT LIFTING GEAR**

To handle or de-install the Filterpump you must:

- disconnect from the power supply
- roll up and hold the electric power cable to avoid cable damage;
- lift the Filterpump and the delivery pipe using appropriate PPE and lifting gear.

If the Filterpump is set up for fixed applications, perform the following operations before handling it:

- disconnect from the power supply;
- unscrew any clamps and remove the delivery pipe;
- roll up and hold the electric power cable to avoid cable damage;
- lift the Filterpump and the delivery pipe using appropriate PPE and lifting gear.

### 7.3. Transport

The Filterpump is packed on a pallet for transport; check the gross weight before moving or transporting these filterpump.

## 8. PREPARATION FOR USE (as per EEC 98/37 p.1.7.4.a, EN 292-2 p.5.1.3).

### 8.1. General information



Before beginning to work on the electrical pump, make sure that you have disconnected the electricity from the power supply mains and that it cannot be accidentally reconnected.

The voltage variation allowed +/- 5% (single phase 220-240 V, 3-phase 380-415 V)

### 8.2. Electrical Connections

Connections must only be performed by an authorised electrician in compliance with the law in force. Verify that the data on the name plate match the nominal values for the power line. Make the connection after verifying the existence of a working grounding circuit.



It is the Installer's responsibility to perform the connection in compliance with regulations in force in the country of installation.

Single phase versions will be supplied with an electrical panel that includes a capacitor.

In the single-phase versions up to 1.1kW included, the motor is protected against overload by a thermal device (overload cut-out) inserted in the winding.

Single phase 1.5-2.2kW power versions need external protection (bimetal trigger overload cut-out) with intervention time calibrated to:

- Less than 30 minutes with 1.5 times IN
- From 7 to 20 seconds with 2 times IN

IN = maximum value of current shown on the name plate

The 3-phase versions need external protection (rapid disconnect magnetic overload cut-out) with intervention time calibrated to:

- Less than 10 seconds with 5 times IN
- Less than 10 minutes with 1.5 times IN

IN = maximum value of current shown on the name plate

The installation of a differential switch is highly recommended

### 8.3. Checking the Direction of Rotation

After connecting the power supply, the direction of rotation can be inverted in the three phase versions; in this case performance will be significantly lower than the nominal values **and will cause substantial damage to the Filterpump if it is run in the wrong direction for more than a few seconds and will invalidate any guarantee.**

To verify a correct connection, proceed as follows:

Start the pump before it is installed. By reaction, it must tend to rotate ("kick") in an **ANTI-CLOCKWISE** direction viewed from above (discharge end).

**CAUTION! This operation will be performed dry and must not last more than a few seconds.**

## 9. INSTALLATION (as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5.1.1b)

### **WARNING**

**TO LIFT OR LOWER THE FILTERPUMP, USE A STRONG ROPE OR CHAIN COMMENSURATE IN STRENGTH WITH THE WEIGHT OF THE PUMP WHEN WET, AND APPROPRIATE LIFTING GEAR**

Before beginning to work on the electrical pump make sure that you have disconnected the power supply from the power supply mains and that it cannot be accidentally reconnected.

The installation of the electrical pump can involve a certain amount of complexity. For this reason, it must be performed by competent and authorised installers.

### **The Delivery Pipe**

The diameter of the delivery pipe depends on the flow rate and pressure available at the points of use. For installations with long lengths of delivery pipe, friction loss can be reduced by using a pipe diameter larger than the discharge outlet of the pump.

**CAUTION!** Do not underestimate the risk of drowning if the installation must be performed in a well of a certain depth. Make sure there is no danger of toxic vapours or harmful gases in the work atmosphere.

### **9.1. Fixed Installation**

**We strongly recommend that the pump is fitted with cos phi monitoring protection**, so that if the filter blocks for any reason or there is insufficient water the pump is automatically stopped to prevent damage from dry running

- 9.1.1. The Filterpump may be installed upright or horizontally although the self-cleaning filter will work better in the upright position.
- 9.1.2. The Filterpump should be fully submerged if possible although this is not necessary except for frost protection. The Filterpump will operate continuously if at least 700mm of the filter unit and suction end of the pump are submerged in water at a temperature of less than 40°C.  
  
There must be a gap of at least 300mm around and 100mm underneath the filter unit, although there is no need for a gap under the Filterpump when operated in the upright position if there is a flow of fluid past the filter pump to take detritus away from the screen (e.g. when installing in a flowing river or flume the filter unit at the suction end of the Filterpump) at all times to allow solid particles to fall or be washed clear of the filter screen. Due allowance must be made to allow for any build-up of solids underneath the filter and any detritus, sludge etc must be removed from time to time to ensure this does not come within 100mm of the filter.  
  
When lowering the Filterpump into a well or tank, ensure that it is at least 100mm above the bottom.  
  
Be careful with the power cable when lowering the Filterpump. It is advisable to tie the power cable to the delivery pipe every two or three metres.
- 9.1.3. When positioning the Filterpump, observe the minimum required distances (figure 2) from walls, from the sides of the drain, tank or other location, so as to allow functioning, use and maintenance operations in safe conditions (as per EN 292-2 p.5.5.1.b).
- 9.1.4. It is recommended that standard size rigid pipes (metal or plastic) be attached to the Filterpump with clamps of a suitable size.
- 9.1.5. Anchor the pipes to the edge of the basin or tank with a pipe clamping bracket.
- 9.1.6. If there is the need to install a non-return valve onto the delivery pipes, make sure it is placed away from the Filterpump filter screen to avoid priming problems when first starting or after emptying.



## 9.2. Temporary Installation (for Temporary Use)

**We strongly recommend that the pump is fitted with cos phi monitoring protection**, so that if the filter blocks for any reason or there is insufficient water the pump is automatically stopped to prevent damage from dry running.

9.2.1. The Filterpump may be installed upright or horizontally. (As above).

The Filterpump should be fully submerged if possible (as above) but it will operate continuously if at least 700mm of the filter unit and suction end of the pump are submerged in water at a temperature of less than 40°C

9.2.2. There must be a gap of at least 300mm around and 100mm underneath the filter unit, although there is no need for a gap under the Filterpump when operated in the upright position if there is a flow of fluid past the filter pump to take detritus away from the screen (e.g. when installing in a flowing river or flume at the suction end of the Filterpump) at all times to allow solid particles to fall or be washed clear of the filter screen. Due allowance must be made to allow for any build-up of solids underneath the filter and any detritus, sludge etc must be removed from time to time to ensure this does not come within 100mm of the filter.

9.2.3. When lowering the Filterpump into a well or tank, ensure that it is at least 100mm above the bottom.

9.2.4. Be careful with the power cable when lowering the Filterpump. It is advisable to tie the power cable to the delivery pipe every two or three metres.

9.2.5. When positioning the Filterpump, observe the minimum required distances (fig. 2) from walls, from the sides of the drain, tank or other location, so as to allow functioning, use and maintenance operations in safe conditions (as per EN 292-2 p.5.5.1.b).

9.2.6. It is recommended that standard size rigid pipes (metal or plastic) be attached to the Filterpump with clamps of a suitable size.

9.2.7. If there is the need to install a non-return valve onto the delivery pipes, make sure it is placed away from the Filterpump filter screen to avoid priming problems when first starting or after emptying.

## 10. ASSEMBLY AND DISASSEMBLY (as per EEC 98/37 p.1.7.4.a).

The basic Filterpump has no separate parts or accessories, so no assembly is required for installation.

**The user must not attempt to disassemble any other component not covered in these instructions and should contact Rotorflush Filters for advice if any further disassembly is required.**

***FAILURE TO COMPLY WITH THIS RULE RENDERS THE GUARANTEE INVALID.***

## 11. ADJUSTING AND REGISTERING (as per EEC 98/37 p.1.7.4.a; EN 292-2 p.5.5.1.d)

The only thing that needs checking once installation is complete is the length of the cable with float (in installations that have one) with respect to the minimum and maximum water level.

## 12. USE AND START-UP (as per EEC 98/37 p.1.7.4.a; EN 292-2 p. 5.5.1.d)

**The water level must never be lower than the filter screen, even when the pump is not running.** If you fail to observe this, the Filterpump will run out of water and you will have great difficulty starting the Filterpump again. Always keep the filter pump submerged to the minimum depth level indicated.

### 12.1. Starting



Never continuously run the Filterpump until it is placed and installed in its final operational position. It is possible to have leakage of the Filterpump oil into the pumped liquid; however, this is not harmful to health.

To start up the Filterpump, connect the power and/or turn on the switch. When the water level reaches the minimum level (figure 2), disconnect the power and/or turn off the switch.

## 13. MAINTENANCE AND REPAIRS (as per EEC 98/37 p.1.6; EN 292-2 p.5.5.1.e)



**BEFORE CARRYING OUT ANY MAINTENANCE OPERATIONS, DISCONNECT THE POWER AND/OR SWITCH OFF.**

**FOR ANY REPAIR JOBS DURING THE GUARANTEE PERIOD, THE USER MUST CONTACT ROTORFLUSH FILTERS**



**FAILURE TO OBSERVE THIS RULE RENDERES THE GUARANTEE INVALID.**

**AFTER THE GUARANTEE PERIOD, ALL MAINTENANCE OPERATIONS, REPAIR JOBS AND/OR REPLACEMENTS, MUST BE CARRIED OUT BY SKILLED TECHNICIANS ONLY.**

To ensure correct functioning and long life of the Filterpump, the Rotorflush filter unit should be inspected every two – six months, depending on mesh type and water conditions. The amount of cleaning required will depend on the liquid being pumped in some instances more frequent manual cleaning of the filter screen may be required, for example where biological growth occurs on the filter screen or oily/fatty deposits are found to build up on the filter screen).

Stainless steel screens should be thoroughly cleaned with a pressure washer. Nylon screens should be cleaned with gentle running water or replaced. It is recommended that nylon screens are replaced at these intervals; Maintenance intervals will vary according to water quality and use.

**Nylon screens:** 300 micron replace every 5000 hours of use or every year. 115 nylon and 60 micron replace every 1000 hours of use or 6 monthly whichever occurs first.

**Stainless steel screens:** **These should be pressure washed at least every year or more frequently depending on conditions.**

Check the condition of the electric power cable; if it is damaged, contact the dealer or Rotorflush Filters Ltd to have it replaced.

**13.1. Troubleshooting**

***TYPE OF FAULT: The pump does not work (the motor does not turn over)***

CAUSE	REMEDY
No electric power	Check the contactor on the electric line
Power cable not connected	Check power connection to the line
Automatic switch has tripped	Reset the switch and check the cause
Protection fuses are burnt out (three-phase)	Replace the fuses with same type
Faulty motor	Contact Rotorflush Filters

***TYPE OF FAULT: The pump does not work (the motor turns over)***


CAUSE	REMEDY
Air in the Pump	Disconnect pipework from the pump to allow air to escape (pump must be submerged at least 700mm)
Intake filter blocked	Clean the filter / replace mesh inserts
Non-return valve blocked	Clean the valve and check its operation
The pump does not start up	Check minimum water level Check function of delivery gate valve
Hole in filter screen causing pump to block with detritus	Return to Rotorflush Filters for repairs

***TYPE OF FAULT: The pump works at a low flow rate***

CAUSE	REMEDY
Dirty delivery pipe	Clean pipe
Clogged filter screen	Clean if continues to be a problem
Dirty Impellers	Check filter screen for damage. If damaged contact Rotorflush Filters for replacement screen)
Non-return valve blocked	Clean the valve and check its operation
Water level too low	Switch off the pump, check water source.
Wrong direction of rotation	Check the direction of rotation (three-phase only, section 9.3)
Wrong supply voltage	Supply the pump with the voltage indicated on the rating plate

14. TECHNICAL INFORMATION (as per EEC 98/37 p.1.1.2 and 1.7.2; EN 292-2 p.


14.1. Diagram of Filterpump Dimensions and Weights for Rotorflush Nauti Range

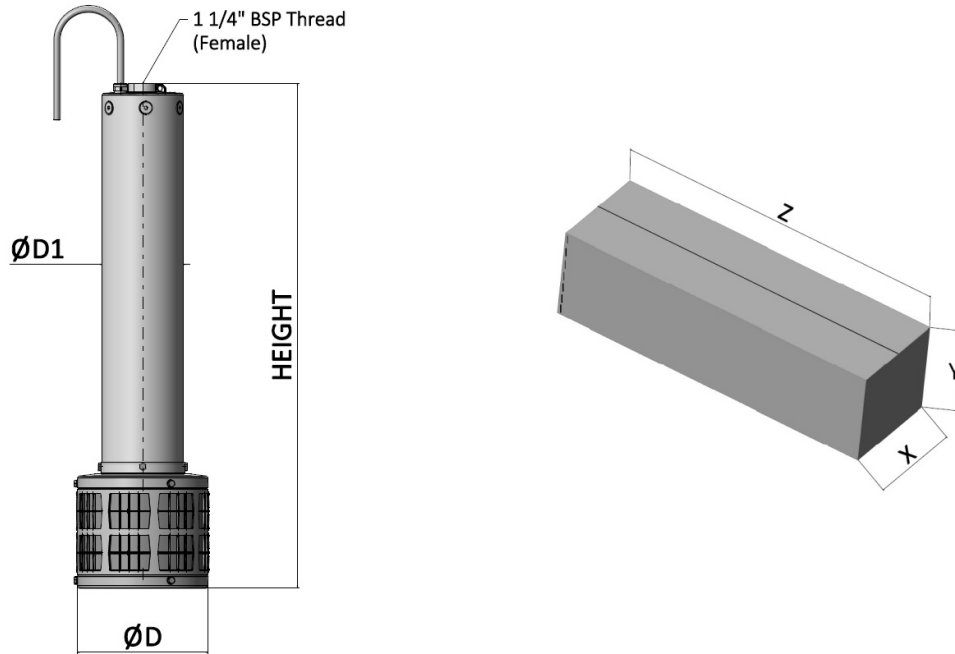

Dimensions and Weight Table (approximate)

MODEL	DIMENSIONS (mm)			PACKING (mm)			WEIGHT (Kg)	
	H	D	D1	X	Y	Z	Single Phase	Three phase
N9316	650	215	129	300	260	980	20.7	20.0
N9416	730	215	129	300	260	980	23.7	21.2
N9516	760	215	129	300	260	980	25.7	24.2
N9616	790	215	129	300	300	1010	26.2	24.7
N9716	820	215	129	300	300	1010	-	26.7
N9816	850	215	129	300	300	1010	-	27.2
N9916	880	215	129	300	300	1010	-	27.7

#### 14.2. Diagram for Installation of Rotorflush Nauti Filterpumps with Minimum Functional Distances

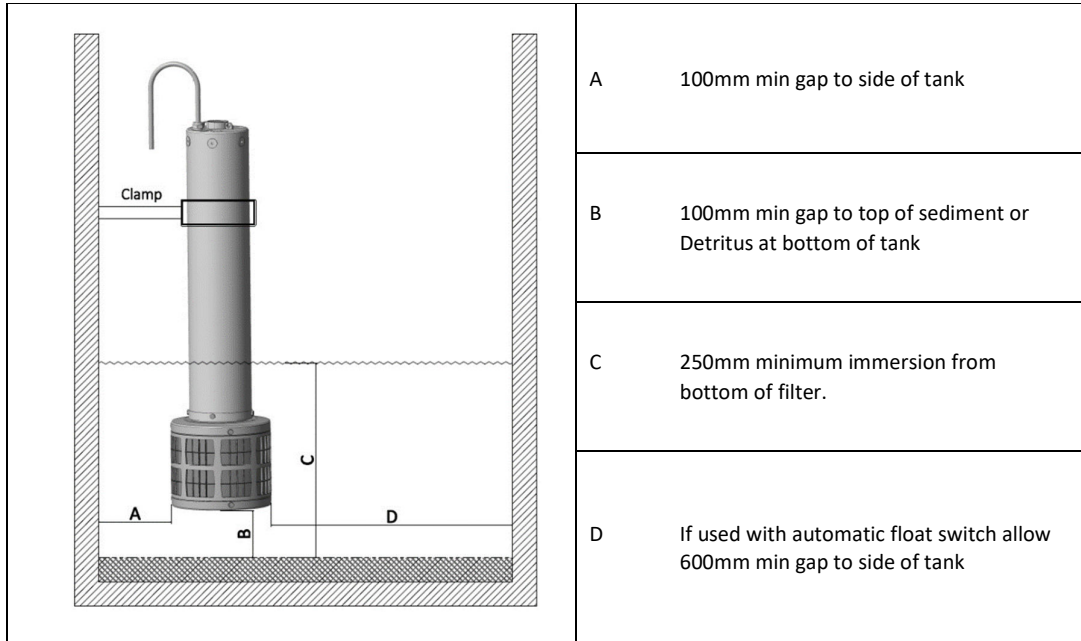


#### 14.3. Pump Motor Data

Model / Type Pump		Power		Capacitor (Single Phase)		Input	Full Load Current (A)	
Single Phase	Three Phase	KW	HP	uF	V1	kW	Single Phase	Three Phase
230V, 50Hz	230/400V, 50Hz							
N9316M	N9316T	1.1	1.5	30	450	1.6	7.5	2.8
N9416M	N9416T	1.5	2	35	450	2.1	10.2	3.65
N9516M	N9516T	2.2	3	45	450	2.5	11.8	4.5
N9616M	N9616T	2.2	3	45	450	2.8	13.0	5.1
	N9716T	3	4	-	-	3.2	-	6.3
	N9816T	3	4	-	-	3.6	-	6.9
	N9916T	3	4	-	-	4.0	-	7.4

14.4. Pump Performance and Efficiency Data

Performance curves 50Hz

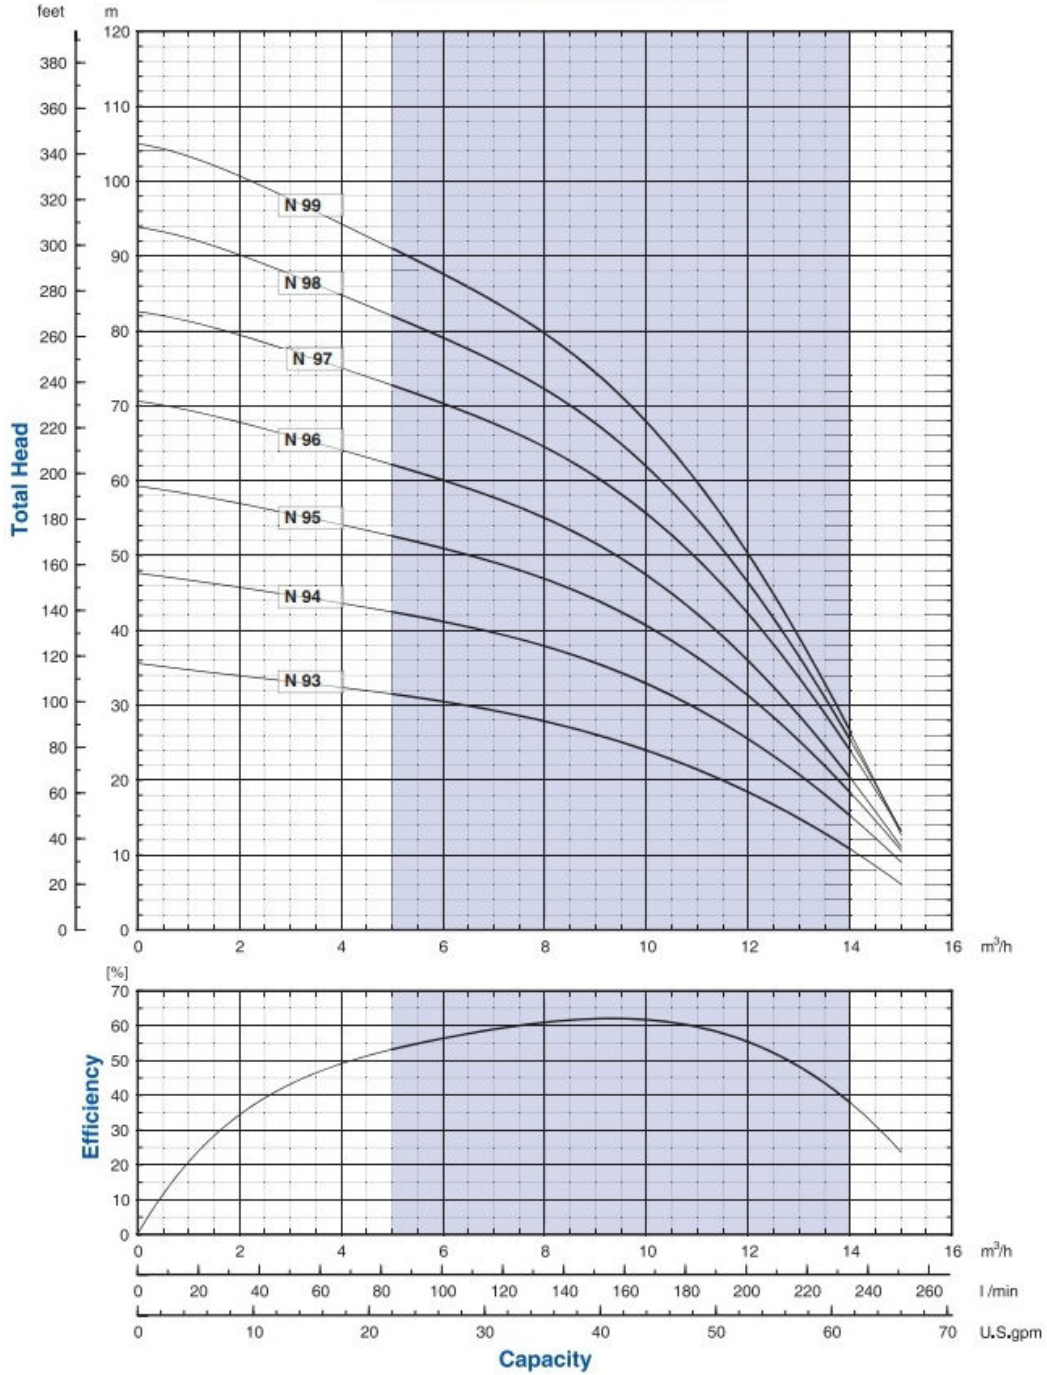

#### 14.5. Pump Construction




Motor Construction		
Type	Submersible dry type	
	Single Phase	Three Phase
No. of Poles	2	
Rotation speed (min <sup>-1</sup> )	2800	
Insulation Class	Class F	
Protection degree	IP 68	
Power rating	kW 1.1 – 2.2	1.5 – 3.0
	HP 1.5 – 3.0	2.0 – 4.0
Frequency	50 Hz	
Voltage (V)	220 – 240	380 - 415
Capacitor	external	-
Overload protection	1.1 kW built in >1.1kW provided by user	Provided by user
Float Switch	Optional	-
Power cable material Length (metres)	H07RN-F	
	20	
Type of cable entry	Cable gland	

Pump Construction		
Liquid Handled	Type of Liquid	Water containing suspended solids (max 2000mg/litre for 250 micron screen)
	Max temperature	40 C
Maximum immersion (m)		20
Construction	Impeller	Closed centrifugal type (multiple stages)
	Shaft seal type	Double mechanical seal with oil chamber
	Bearing	Sealed ball bearing
Pipe connection	Inlet	Self-cleaning strainer
	Outlet	G 1¼" (female)
Materials	Casing	AISI 304
	Casing cover	AISI 304
	Impeller	AISI 304 Stainless steel
	Diffuser	AISI 304 Stainless steel
	Shaft	AISI416
	Shaft seal	Pump side: Sic/Sic/FPM Motor side: Carbon/Ceramic/NBR
Lubricating Liquid		White mineral oil: Esso Marcol 82 (50 ml)

#### 14.6. Self-cleaning Filter Construction

Self-cleaning Suction Inlet Filter Construction	
Filter screen area	474 cm <sup>2</sup>
Screen materials: Nylon inserts in polyethylene surrounds <b>OR</b> Woven stainless steel	Bias cut nylon filter mesh, 60, 115 or 300 micron apertures  316 stainless steel, 50, 100 or 315 micron apertures
Impeller extension shaft	AISI 304
Impeller	AISI 304 stainless steel
Rotor	Acetal copolymer
Rotor bearings	Silicon carbide Acetal copolymer housing
Filter cage	AISI304 stainless steel

#### 14.7. Rating Plate Example

		<b>ROTORFLUSH FILTERS LTD</b> The Workshop, Langmoor Manor Charmouth, DT6 6BU. UK 0044 (0) 1297 560229			 Made in the UK (1)	
Type Filterpump (2)			<b>FPE</b> (3)			
Q max (4)		H max (5)		H min (6)		
MOT (7)	V (8)		Hz (9)	 (10)		
HP (11)	kW (12)		Mesh (13)			
A (14)	ICL. F (15)	DN: (16)	IP (17)	rpm (18)		
Continuous duty Thermally protected Max. liq. Temp (19)						
Weight (20)			P/N: (21)			



**Rating Plate Key**

(1)	Date	Date of Manufacture
(2)	Model No.	Filterpump model reference number
(3)	Serial Number	Unique Identifier
(4)	"Q"	Max capacity of duty point in litres / minute
(5)	"Hmax"	Max total head (corresponds to shut-off head)
(6)	"Hmin"	Min total head in metres
(7)	Phase	Type of motor (single or three phase)
(8)	"V~"	Nominal voltage
(9)	"Hz"	Frequency in Hertz
(10)	"m"	Max operational depth in metres
(11)	"HP"	Nominal horse power of the motor
(12)	"P2"	Nominal power of the motor (shaft power) in kW
(13)	Mesh	Intake mesh type and aperture
(14)	"A"	Nominal current in Amps
(15)	"Ins. C. F S1"	Insulation class and duty type
(16)	"DN"	Outlet diameter (ID) in mm
(17)	"IP"	Protection classification (IP rating)
(18)	"min-1"	Revolution speed rpm
(19)	"TMAX"	Rating and maximum water temperature Celsius
(20)	"Weight"	Weight in kgs
(21)	"P/N"	Part Number

**15. INFORMATION ON AIR-BORNE NOISE (as per EEC 89/392 p. 1.7.4.f)**

The weighted sound pressure level A produced by the Filterpump does not exceed the value of 70 dB(A)


**16. WASTE DISPOSAL**

Before scrapping the Filterpump, make sure the lubricating oil is separated from the other components. Do not dump lubricating oil in the environment. It must be disposed of properly.

**17. DECLARATION OF CONFORMITY**

**DECLARATION OF CONFORMITY**

We, ROTORFLUSH FILTERS LIMITED, declare under our own responsibility that our products Filterpump Filterpump N9316, N9416, N9516, N9616, N9716, N9816 and N9916 conform to the Machinery Directive 89/392/CEE as modified by Directives 91/368/CEE, 93/44/CEE, 93/68/CEE, to the Low Tension Directive 73/23/CEE, as modified by Directive 93/68/CEE and to the Electromagnetic Compatibility Directive 89/336/CEE as modified by Directive 93/68/CEE.

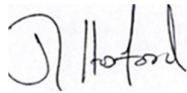

**J Hosford**  
**Proprietor Rotorflush Filters**