
ROTORFLUSH FILTERPUMPS
USE AND MAINTENANCE INSTRUCTION MANUAL
TO BE KEPT BY THE USER

1. MANUFACTURER AND FILTERPUMP IDENTIFICATION DATA (as per EEC98/37 p. 1.7.4a)

1.1. Manufacturer Data

Rotorflush Filters Limited
Langmoor Manor
Charmouth
Bridport
Dorset
DT6 6BU
England
Telephone: +44 (0) 1297 560229
Fax: +44 (0) 1297 560110
Email: mail@rotorflush.com

1.2 Filterpump Data

Description: Submersible Filterpump Model E8020T, E8015-16T, E8015-16M E8010, E4015, E4010, E4008, E4006, E4004

Year of manufacture: see plate on Filterpump

2. TECHNICAL ASSISTANCE INFORMATION

If a malfunction of the Filterpump is not covered in the TROUBLESHOOTING table (Section 14.1) contact Rotorflush Filters Ltd at the above address.

3. INTRODUCTION

This publication contains all necessary information and instructions for the use and maintenance of your Rotorflush Filterpump.

Follow the advice given to ensure correct operation and optimum performance of the Filterpump. For any other information, please contact Rotorflush Filters Ltd.

THESE INSTRUCTIONS AND ILLUSTRATIONS ARE SUBJECT TO COPYRIGHT AND MUST NOT BE COPIED IN WHOLE OR IN PART

4. **CONTENTS**

1. Manufacturer and Machine Identification Data
2. Information on Technical Assistance
3. Introduction
4. Contents
5. General Safety Warnings
 - 5.1. Preventive measures to be taken by the user
 - 5.2. Significant protection and precautions
6. Description
 - 6.1. General description
 - 6.2. Technical and construction features
7. Technical Data Card
 - 7.1. Pump technical data
 - 7.2. Motor technical data
 - 7.3. Filter technical data
8. Contemplated and Non-contemplated Use
 - 8.1. Contemplated conditions of use
 - 8.2. Non-contemplated conditions of use
9. Handling and Transport
 - 9.1. Unpacking
 - 9.2. Handling and De-installing
 - 9.3. Transport
10. Installation
 - 10.1. Fixed installation
 - 10.2. Temporary installation
11. Assembly and Disassembly
12. Preparation for Use
 - 12.1. Connection to electricity supply
 - 12.2. Adjusting and registering
13. Use and Start-up
 - 13.1. Starting
 - 13.2. Version with float switch
 - 13.3. Version without float switch
14. Maintenance and Repairs
 - 14.1. Troubleshooting
15. Technical Information
 - 15.1. Diagram of Filterpump Dimensions, packing and weights (fig. 1)
 - 15.2. Diagram for installing with minimum functional spaces (fig. 2)
 - 15.3. Diagram for single phase Filterpump with automatic float switch (fig. 3)
 - 15.4. Wiring diagram for single-phase Filterpump without automatic float switch (fig. 4)
 - 15.5. Wiring diagram for three-phase Filterpump (fig. 5)
 - 15.6. Plate example
16. Information on Air-borne Noise
17. Waste disposal

5. **GENERAL SAFETY WARNINGS**

FAILURE TO OBSERVE THESE WARNINGS AND/OR ANY TAMPERING WITH THE FILTERPUMP EXEMPTS ROTORFLUSH FILTERS LTD FROM ALL RESPONSIBILITY IN THE EVENT OF PERSONAL INJURY OR DAMAGE TO EQUIPMENT OR PROPERTY AND/OR TO THE FILTERPUMP

Read this manual carefully and check to ensure that the Filterpump has been properly installed and connected in accordance with relevant safety standards before starting the Filterpump.

There are no RESIDUAL RISKS with Rotorflush Filterpumps.

No particular technical skills are required to use Rotorflush Filterpumps.

No personal safety devices (precaution devices) are required to use Rotorflush Filterpumps.

5.1. **Preventive Measures to be Taken by the User**



a) The user must specifically comply with all the accident prevention regulations in force in the respective countries in which the Filterpump is being used; the indications given in Section 7.1 must be scrupulously followed.

b) During operation make sure that nobody is in the water

c) Before undertaking any repairs or maintenance to the Filterpump, isolate the electricity supply by removing the plug from the socket and/or turning off the switch (if provided). This will prevent accidental starting which could cause personal injury or damage to equipment or property.



d) Any maintenance operation, installation or moving the Filterpump with the electrical system live may cause serious injury and could prove fatal.

e) During operation, avoid moving the Filterpump.

f) Before using the Filterpump, always check that the cable and all electrical devices are in perfect working order.

g) When starting up the Filterpump (by turning on the switch, if provided, or by inserting the plug in the socket) ensure (i) you do not have wet hands (ii) you are not standing in water and (iii) you are not barefoot.

h) The user must not carry out under his/her own initiative any operations or tasks not contemplated in this manual.

5.2. **Significant Protection and Precautions**

(as per EEC 98/37 p. 1.1.2 and 1.7.2; EN 292-2 p.5).

Rotorflush Filterpumps are designed so that all moving parts are shrouded by protective casings. Rotorflush Filter Ltd declines all responsibility in the event of injury or damage caused as a result of tampering with these devices.



Each lead or live part is electrically insulated to earth; there is also a further safety device in that the accessible conductive parts are connected to an earth lead so that the parts within reach cannot become dangerous in the event of failure of the principal insulation.

6. DESCRIPTION

6.1. **General Description**

Rotorflush EB Series Filterpumps are all similar from the functional and constructive point of view; the only differences are the following:

- power
- flow rate
- head
- electric power supply (single phase or three phase)
- weight
- dimensions

Rotorflush Filterpumps are used for handling water containing total suspended solids not greater than 2,000 mg/litre dry weight at temperatures up to 35°C (Section 7.1). Unwanted solids are separated by a self-cleaning filter which is continuously backwashed with filtered water pumped through a dual-headed rotor by a secondary impeller mounted on an extended impeller shaft attached to the pump.

Thanks to their small bulk and ease of transport, they may be used for fixed or temporary installations, with or without automatic start.

Rotorflush Filterpumps are designed for long life and constant performance if used according to the instructions given in Sections 8 and 14.

6.2. **Technical and Construction Characteristics**

Rotorflush Filterpumps are designed and built to the following design and construction standards:

RISKS OF A MECHANICAL NATURE (Annex 1, Machines Directive):

- EN 292-1 and EN 292-2

RISKS OF AN ELECTRICAL NATURE (Annex 1, Machines Directive):

- EN 292-1 and EN 292-2
- CEI EN 60 335-2-41

RISKS OF VARIOUS NATURE (Annex 1, Machines Directive):

- EEC 98/37 - Annex 1

Electrical components and their circuits installed in Rotorflush Filterpumps comply with standards CEI EN 60204-1.

7. TECHNICAL DATA CARD (as per EEC 98/37 p.1.1.2 and 1.7.2; EN 292-2 p.5)
7.1. Pump Technical Data
8015M and 8020T

Maximum temperature of pumped fluid	°C	35 (as per EN 60335-2-41 for household use)
Maximum immersion depth.....	m	= (length of electric cable-2) to a maximum of 20m. 10m for model with floating switch.
Maximum total head	m	See plate on Filterpump
Length and type of power cable	m	10 (20) H07 RN-F
Maximum working pressure kPa	(bar)	1000 (10)
Type of impeller		Closed
Type of seal on shaft		Duplex seal with oil-lubricated intermediate chamber
Type of bearing		Shielded ball bearing
Delivery diameter		Threaded Rp 1 1/4
Impeller material		Technopolymer
Stage material		Technopolymer
Diffusers material		Technopolymer
Seal holder material		Stainless steel
Maximum number of hourly revolutions		25

7.2. Motor Technical Data
8015M
8020T

Power	kW	1.2	1.6
Type		Dry submerged	
Polarity	No.	2	
Insulation class		F	
Degree of protection		IP68	
Type of duty		Continuous	
Phase - frequency - voltage		See plate on Filterpump	
		See fig. 8 for voltages and equivalent tolerances	
Overpower protection		Thermal-magnetic tripswitch (single phase only)	
Condenser		Included (single phase only)	
Motor structure material		Stainless steel	
Shaft material		Stainless steel	
Cable protective covering		Neoprene	
Maximum number of equally distributed hourly revolutions		25	

7.3. Self-cleaning Filter Technical Data

Filter Area		273 cm ²
Filter Mesh		Monofilament nylon 250 micron apertures
Materials: Filter cage and rotor		316 stainless steel
Rotor thrust bearing		Silicon Carbide
Rotor bearing housings		Acetal copolymer
Rotor impeller		Glass filled Nylon
Rotor impeller bush		Brass
Rotor impeller extension shaft		316 stainless steel

8. CONTEMPLATED AND NON-CONTEMPLATED USE

WARNING

Failure to respect the prescribed limits constitutes a situation of use that is technically improper and may endanger the safety of persons and thus EXEMPTS ROTORFLUSH FILTERS LTD FROM ANY RESPONSIBILITY IN THE EVENT OF ACCIDENTS TO PERSONS OR DAMAGE TO EQUIPMENT OR PROPERTY AND/OR TO THE FILTERPUMP, THEREBY RENDERING THE GUARANTEE INVALID.

8.4 Contemplated Conditions of Use

Rotorflush Filterpumps are suitable for pumping water with a total suspended solids loading not exceeding 2000mg/litre dry weight. Oily/fatty/sticky solids will reduce filter performance. They can be used with pressurisation units. Use the Filterpump in keeping with its technical characteristics (Section 7).

8.5 Non-Contemplated Conditions of Use

Rotorflush Filterpumps must not be installed in swimming pools and similar environments, for pumping fluids having a total suspended solids loading of not more than 2,000 mg/litre dry weight, water containing acids and corrosive liquids in general, water with temperatures over 35°C (as per EN 60335 - 2 -41), sea water, inflammable and dangerous liquids in general.

Rotorflush Filterpumps must never be run without water.

9. HANDLING AND TRANSPORT

(as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5 1.1.a)

9.1 Unpacking

Check that there are no breakages or severe dents in the packing; if there are, point this out immediately to the person who delivers the material. After removing the Filterpump from the package, check that it has not suffered any damage during transit; if damage is found, inform the dealer within 8 days of delivery. Check that the specifications stated on the plate of the Filterpump are the same as you requested in your order.

9.2 Handling and De-installing



WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE THE FILTERPUMP TO FALL AND SUFFER SEVERE DAMAGE. NEVER UNDER ANY CIRCUMSTANCES USE THE POWER CABLE TO LIFT OR DRAG THE FILTERPUMP.



To handle or de-install the Filterpump you must:

- remove the plug from the power socket and/or switch off the switch, if provided;
- roll up and hold the electric power cable in your hand;
- lift the Filterpump and the delivery pipe with the handle provided.

If the Filterpump is set up for fixed applications, perform the following operations before handling it:

- remove the plug from the power socket and/or switch off the switch, if provided;
- unscrew any clamps and remove the delivery pipe;
- roll up and hold the electric power cable in your hand;
- lift the Filterpump and the delivery pipe with the handle provided.

9.3 Transport

The Filterpump is packed in a cardboard box for transport; as its total weight and bulk are not excessive (fig 1), transport presents no difficulties. However, check the gross weight marked on the box.

10. INSTALLATION (as per EEC 98/37 p. 1.7.4.a; EN 292-2 p.5.1.1b)**WARNING**

TO LIFT OR LOWER THE FILTERPUMP, USE A ROPE FIXED TO THE HANDLE; NEVER USE THE ELECTRIC POWER CABLE.

The Filterpump must be protected by the installation of dry run protection. If the filter blocks because of high levels of solids in the water or for some other reason the pump will run without water. This will cause damage to the pump and will invalidate any guarantee. Dry run protection can be by monitoring the power factor of the motor or by monitoring the flow/pressure from the delivery pipe.

Rotorflush can provide dry run protection for its pumps and it is strongly advised that the correct protection is purchased from Rotorflush Filters

10.1 Fixed Installation

- 10.1.1 The Filterpump may be installed upright or horizontally although the self-cleaning filter will work better in the upright position
- 10.1.2 The Filterpump should be fully submerged if possible although this is not necessary except for frost protection. The Filterpump will operate continuously if at least 350mm of the filter unit and suction end of the pump are submerged in water at a temperature of less than 35°C.
- 10.1.3 There must be a gap of at least 100mm around and underneath the filter unit, although there is no need for a gap under the Filterpump when operated in the upright position if there is a flow of fluid past the filter pump to take detritus away from the screen (e.g. when installing in a flowing river or flume the filter unit at the suction end of the Filterpump) at all times to allow solid particles to fall or be washed clear of the filter screen. Due allowance must be made to allow for any build-up of solids underneath the filter and any detritus, sludge etc must be removed from time to time to ensure this does not come within 100mm of the filter.
- 10.1.4 When lowering the Filterpump into a well or tank, ensure that it is at least 100mm above the bottom.
- 10.1.5 Be careful with the power cable when lowering the Filterpump into a borehole. It is advisable to tie the power cable to the delivery pipe every two or three metres.
- 10.1.6 When positioning the Filterpump, observe the minimum required distances (fig. 2) from walls, from the sides of the drain, tank or other location, so as to allow functioning, use and maintenance operations in safe conditions (as per EN 292-2 p.5.5.1.b).
- 10.1.7 It is recommended that G 1¼" rigid pipes (metal or plastic) be attached to the Filterpump with clamps of a suitable size.
- 10.1.8 Anchor the pipes to the edge of the basin or tank with a pipe clamping bracket.
- 10.1.9 If there is the need to install a non-return valve onto the delivery pipes, make sure it is placed away from the Filterpump filter screen to avoid priming problems when first starting or after emptying.

10.2 Temporary Installation (for Temporary Use)

- 10.2.1 The Filterpump may be installed upright or horizontally. (As above)
- 10.2.2 The Filterpump should be fully submerged if possible (as above) but it will operate continuously if at least 350mm of the filter unit and suction end of the pump are submerged in water at a temperature of less than 25°C.
- 10.2.3 There must be a gap of at least 100mm around and underneath the filter unit, although there is no need for a gap under the Filterpump when operated in the upright position if there is a flow of fluid past the filter pump to take detritus away from the screen(e.g. when installing in a flowing river or flume at the suction end of the Filterpump) at all times to allow solid particles to fall or be washed clear of the filter screen. Due allowance must be made to allow for any build-up of solids underneath the filter and any detritus, sludge etc must be removed from time to time to ensure this does not come within 100mm of the filter.
- 10.2.4 When lowering the Filterpump into a well or tank, ensure that it is at least 100mm above the bottom.
- 10.2.5 Be careful with the power cable when lowering the Filterpump into a borehole. It is advisable to tie the power cable to the delivery pipe every two or three metres.
- 10.2.6 When positioning the Filterpump, observe the minimum required distances (fig. 2) from walls, from the sides of the drain, tank or other location, so as to allow functioning, use and maintenance operations in safe conditions (as per EN 292-2 p.5.5.1.b).
- 10.2.7 It is recommended that G 1¼" rigid pipes (metal or plastic) be attached to the Filterpump with clamps of a suitable size.
- 10.2.8 If there is the need to install a non-return valve onto the delivery pipes, make sure it is placed away from the Filterpump to avoid priming problems when first starting or after emptying.

11. **ASSEMBLY AND DISASSEMBLY** (as per EEC 98/37 p.1.7.4.a).

The Filterpump has no separate parts or accessories, so no assembly is required for installation

The user must not attempt to disassemble the Filterpump and should contact Rotorflush Filters for advice if any further disassembly is required.

FAILURE TO COMPLY WITH THIS RULE RENDERS THE GUARANTEE INVALID.

12. PREPARATION FOR USE (as per EEC 98/37 p.1.7.4.a, EN 292-2 p.5.1.3).

On three phase Filterpumps, check the direction of rotation of the motor. The impeller must turn in a clockwise direction when viewing the Filterpump from above (see arrow on pump).

As it is not possible to check the direction of rotation of the impeller visually, you should proceed as follows: before anchoring the Filterpump to the system, connect the power cables to the electric panel and turn on the mains switch for a moment; the Filterpump will start up with a kick back.. **To be sure that the impeller turns in the right direction, the kick-back must be in an anti -clockwise direction (when viewing the Filterpump from above).**

Keep in mind that the Filterpump achieves its maximum flow rate only when the connection of the phases is appropriate; a wrong connection resulting in the rotation being in the opposite direction will greatly reduce its performance.

If the pump is run in the wrong direction for more than a few seconds it will be damaged severely and will invalidate any guarantee.

12.1 Connection to Electrical Supply

12.1.1 For connection to the mains, use the power cable complying with IEC standards supplied with the Filterpump; connect by means of a bi-polarity disconnecting switch (with min. 3mm contact opening), or another similar device. Remember to take into account the power installed (0.9 - 1.8 KW), the mains voltage and the number of phases (section 7.2).

12.1.2 The mains must have an effective earthing system in accordance with the electrical standards existing in the user's country: this is the installer's responsibility.

12.1.3 In the single phase version it is necessary to use a plug with a double earthing contact complying with CEE Pub.7 norms (fig 3); earthing contact takes place when the plug is connected to the socket.

The connection of the plug to the mains must be done indoors, away from any sprays and jets of water or rain. Make sure you have easy access to the plug.

An automatic reset thermal protective device protects the motor against overloads.

A surge protection device must be installed on the input side of the mains supply to protect the electrical equipment supply conductors.

12.1.4 A power cable with a yellow and green wire for earthing (figure 5) is supplied with the three phase version; this must be connected to an efficient earthing system in accordance with the electrical standards applicable to the user's country.

The three phase version does not have an internal motor-protector, so an appropriate overload protection device must be provided and installed by a qualified electrician. The power supply for the Filterpump must arrive by means of the following:

12.1.4.1 A bi-polarity disconnecting switch (with min. 3mm contact opening)

12.1.4.2 A motor protection thermal-magnetic tripswitch calibrated to the nominal current indicated on the identification plate.

12.1.4.3 A surge protection device, to protect the electrical equipment supply conductors.

The sectioning device must be interlocking or positioned in a place which is easily visible from the site of the Filterpump.

12.1.4.4 Whenever the Filterpump is either in a fixed installation and/or placed outside, it is necessary for both the single phase and the three phase version to install a high sensitivity differential switch in the installation (0.03A).

All electrical connections must be carried out by a qualified electrician.

12.2 Adjusting and Registering

(as per EEC 98/37 p.1.7.4.a; EN 292-2 p.5.5.1.d)

The only thing that needs checking once installation is complete is the length of the cable with float (in versions that have one) with respect to the minimum and maximum water level (fig. 2).

13. USE AND START-UP (as per EEC 98/37 p.1.7.4.a; EN 292-2 p. 5.5.1.d)

If the system is supplied with a delivery gate valve, the water level must never be lower than the filter screen, even when the pump is not being used. If you fail to observe this, the Filterpump will run out of water and you will have great difficulty starting the Filterpump again.

13.1 Starting



Never switch on the Filterpump until it is placed and installed in its final operational position. It is possible to have leakage of the Filterpump oil into the pumped liquid; however, this is not harmful to health.

13.2 Version With Floating Switch

To start up the Filterpump, connect the plug and/or turn on the switch. The Filterpump will start automatically as soon as the water level, regulated by the floating switch, reaches the minimum level (fig.2). The performance of the floating switch has been designed by the manufacturer to assure a minimum immersion level in the OFF position.

9.1 Version Without Floating Switch

To start up the Filterpump, connect the plug and/or turn on the switch. When the water level reaches the minimum level (fig. 2), disconnect the plug and/or turn off the switch.

14. MAINTENANCE AND REPAIRS (as per EEC 98/37 p.1.6; EN 292-2 p.5.5.1.e)


BEFORE CARRYING OUT ANY MAINTENANCE OPERATIONS, DISCONNECT THE PLUG AND/OR SWITCH OFF.

FOR ANY REPAIR JOBS DURING THE GUARANTEE PERIOD, THE USER MUST CONTACT ROTORFLUSH FILTERS LTD. FAILURE TO OBSERVE THIS RULE RENDERS THE GUARANTEE INVALID.



AFTER THE GUARANTEE PERIOD, ALL MAINTENANCE OPERATIONS, REPAIR JOBS AND/OR REPLACEMENTS, MUST BE CARRIED OUT BY SKILLED TECHNICIANS ONLY.

To ensure correct functioning and long life of the Filterpump, the Rotorflush filter unit should be inspected and cleaned every two months (see Appendix 1) The amount of cleaning required will depend on the liquid being pumped in some instances more frequent manual cleaning of the filter screen may be required, for example where biological growth occurs on the filter screen or oily/fatty deposits are found to build up on the filter screen) This is the only maintenance required by the Filterpump.

Check the condition of the electric power cable; if it is damaged, contact the dealer or Rotorflush Filters Ltd to have it replaced.

14.1 Troubleshooting

TYPE OF FAULT: The pump does not work (the motor does not turn over)

CAUSE	REMEDY
No electric power	Check the contactor on the electric line
Plug not inserted	Check power connection to the line
Automatic switch has tripped	Reset the switch and check the cause
Float blocked	Check that the float reached ON level
Thermal protection has tripped (single phase)	This resets automatically
Protection fuses are burnt out (three-phase)	Replace the fuses with same type
Faulty motor or capacitor	Contact Rotorflush Filters Ltd

TYPE OF FAULT: The pump does not work (the motor turns over)

CAUSE	REMEDY
Intake filter blocked	Cleans the filter (chapter 14)
Non-return valve blocked	Clean the valve and check its operation
The pump does not start up	Check minimum water level Check function of delivery gate valve
Hole in filter screen causing pump to block with detritus	Return to Rotorflush for repairs

TYPE OF FAULT: The pump works at a low flow rate


CAUSE	REMEDY
Dirty deliver pipe	Clean pipe
Clogged filter screen	Clean, if continues to be a problem, fit Sensorflush (available from Rotorflush Filters)
Dirty Impellers	Check filter screen for damage. If damaged contact Rotorflush Filters for replacement screen)
Non-return valve blocked	Clean the valve and check its operation
Water level too low	Switch off the pump
Wrong direction of rotation	Check the direction of rotation (three-phase only, section 12)
Wrong supply voltage	Feed the pump with the voltage indicated on the rating plate

TYPE OF FAULT: The pump stops after brief periods of operation (tripping the thermal protection)


CAUSE	REMEDY
Liquid temperature too high	The temperature exceeds the technical limits of the pump
Internal defect	Contact Rotorflush Filters Ltd

15. TECHNICAL INFORMATION

15.1 Diagram of Filterpump Dimensions, Packing and Weights Fig 1

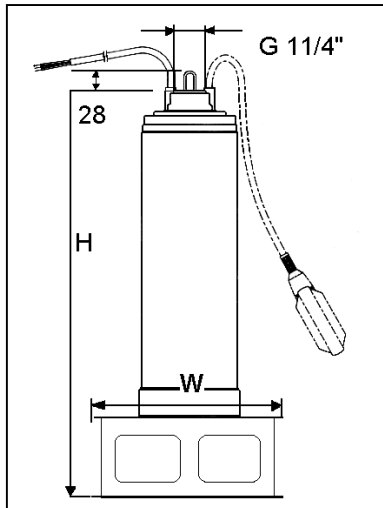

MODEL	DIMENSIONS (mm)		PACKING (mm)			WEIGHT (Kg)
	H	W	X	Y	Z	
8020	730	210	290	240	780	20
8015	634	210	290	240	780	19
8010	610	210	290	240	780	18
4015	686	210	290	240	780	20
4010	660	210	290	240	780	19
4008	609	210	290	240	780	18
4006	583	210	290	240	780	17
4004	583	210	290	240	78-	15

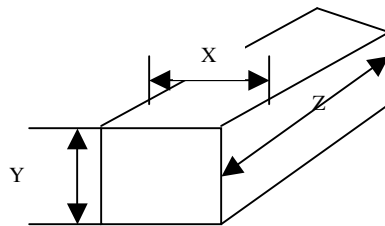

15.2 Diagram for Installation with Minimum Functional Distances


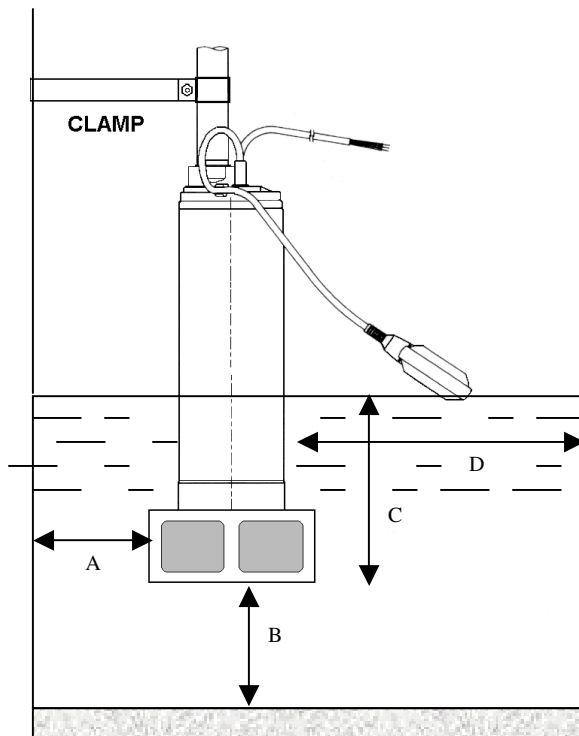



Fig 2

- A 100mm min gap to side of tank
- B 100mm min gap to top of sediment or detritus at bottom of tank
- C With automatic float switch:
350mm minimum immersion from bottom of filter.
Without automatic float switch:
130mm minimum immersion from bottom of filter.
- D If used with automatic float switch allow 600mm min gap to side of tank

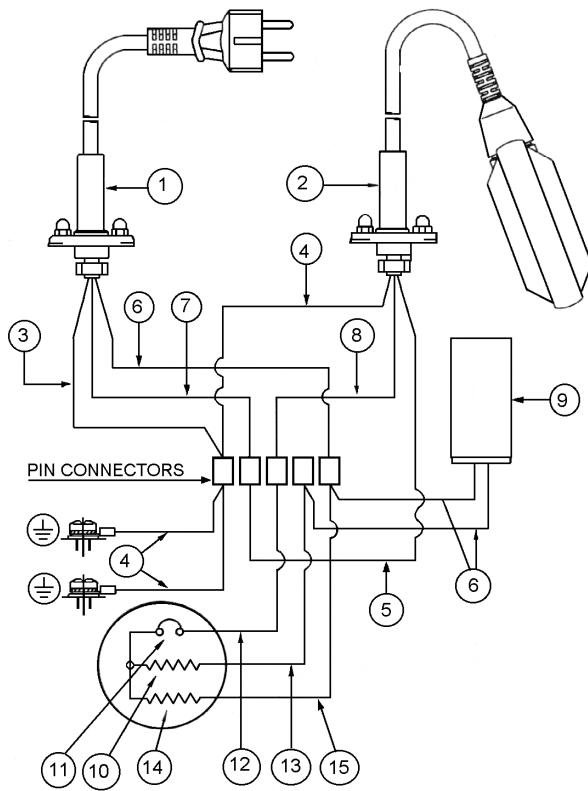

15.3 WIRING DIAGRAM FOR SINGLE-PHASE FILTERPUMP WITH FLOAT SWITCH


1. Supply cable
2. Float cable
3. Yellow / Green
4. Yellow / Green
5. Blue
6. Blue
7. Black or Brown
8. Brown
9. Capacitor
10. Start
11. Motor protector
12. Black
13. White
14. Run
15. Green
16. White

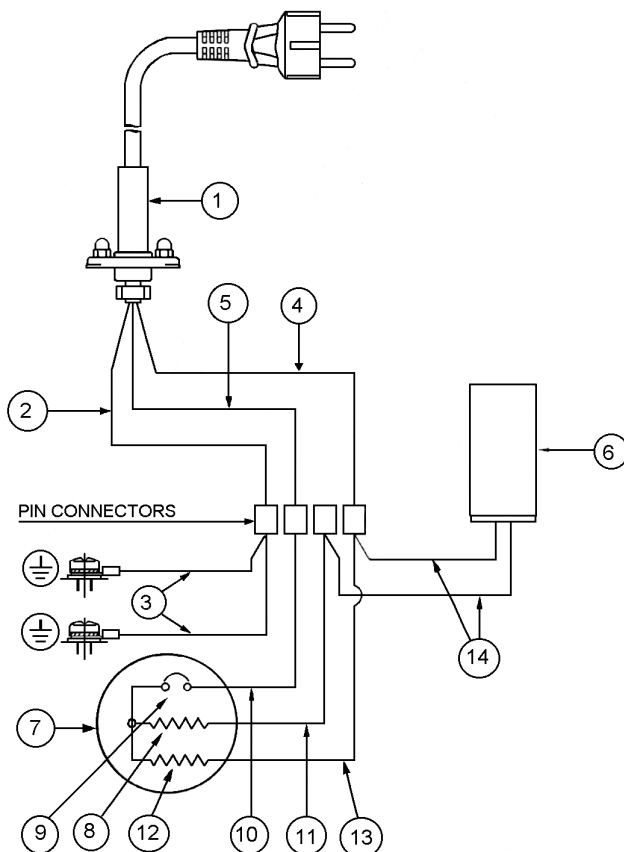

15.4 WIRING DIAGRAM FOR SINGLE-PHASE FILTERPUMP WITHOUT FLOAT SWITCH

1. Supply cable
2. Yellow / Green
3. Yellow / Green
4. Blue
5. Black or Brown
6. Capacitor
7. Motor
8. Start
9. Motor protector
10. Black
11. White
12. Run
13. Green
14. White

Fig 4

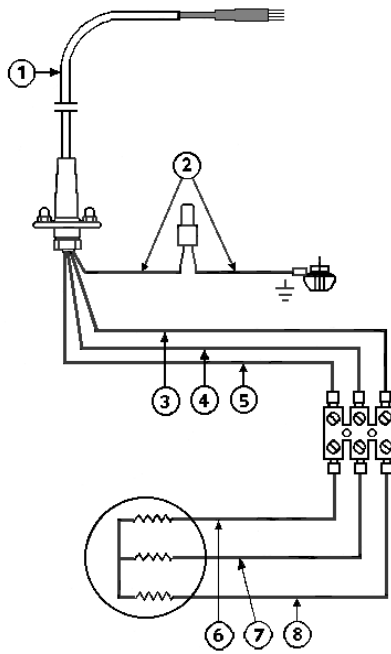



15.5 WIRING DIAGRAM FOR THREE-PHASE FILTERPUMP

1. Supply cable
2. Yellow / Green
3. Black
4. Blue
5. Brown
6. Black
7. Black
8. Black

Fig 5

15.6 Rating Plate Example

 ROTORFLUSH FILTERS LTD Langmoor Manor Charmouth DT6 6BU UK +44 (0)1297 560229				
TYPE		(1)	(2)	
Q	(3) l/min.	H	(4)	Hmax (5) m
V~	(6)			Hmin (7) m
P ₂	(8) kW	HP	(9)	Hz (10)
P ₁	(12) kW	Phase	(13)	Min (14)
MF	(15)	Vc	(16)	IP (17)
Ins.C. F	(19) S1	Weight	(20) Kg	P/N (21)

- | | | |
|------|-------------------|--|
| (1) | Model | |
| (2) | Serial Number | |
| (3) | "Q" | Min and max capacity of duty point |
| (4) | "H" | Total head in relation to min and max capacity |
| (5) | "Hmax" | Max total head (usually corresponds to the shut-off) |
| (6) | "V~" | Nominal voltage |
| (7) | "Hmin" | Min total head |
| (8) | "P ₂ " | Nominal power of the motor (shaft power) |
| (9) | "HP" | Nominal horse power of the motor |
| (10) | "Hz" | Frequency |
| (11) | "A" | Nominal current |
| (12) | "P ₁ " | Input power |
| (13) | "Phase" | Type of motor (single or three phase) |
| (14) | "min-1" | Revolution speed |
| (15) | "[F]" | Capacitor data (single phase only) |
| (16) | "Vc" | Capacitor voltage |
| (17) | "IP" | Protection classification |
| (18) | "∇" | Max operational depth |
| | m | |
| (19) | "Ins. C. F S1" | Insulation class and duty type |
| (20) | "Weight" | Weight |
| (21) | "P/N" | Part number |
| | 03 | Year of manufacture (eg 03 = 2003) |

SINGLE PHASE		
Voltage indicated on the label	Tolerance	Operating Range
110 [V]	+/- 6%	103 - 107 [V]
115 [V]	+/- 6%	108 - 122 [V]
220 [V]	+/- 6%	207 - 233 [V]
230 [V]	+/- 10%	207 - 253 [V]
240 [V]	+/- 6%	226 - 255 [V]
208 - 230 [V]	+/- 6%	196 - 244 [V]
220 - 240 [V]	+/- 6%	207 - 255 [V]
230 - 240 [V]	- 10% + 6%	207 - 255 [V]
Other [V]	+/- 5%	-

THREE PHASE			
Voltage indicated on the label	Tolerance	Operating Range	
		Delta Connection "≡"	Star Connection "Y"
220 ≡ / 380 Y [V]	+/- 6%	207 - 233 ≡	357 - 403 Y [V]
240 ≡ / 415 Y [V]	+/- 6%	226 - 253 ≡	390 - 440 Y [V]
230 ≡ / 400 Y [V]	+/- 10%	207 - 253 ≡	360 - 440 Y [V]
220 - 240 ≡ / 380 - 415 Y [V]	+/- 5%	207 - 253 ≡	360 - 440 Y [V]
230 - 240 ≡ / 400 - 415 Y [V]	- 10% + 6%	207 - 253 ≡	360 - 440 Y [V]
230 [V]	+/- 10%	207 - 253 ≡	Not available
400 [V]	+/- 10%	Not available	360 - 440 Y [V]
208 - 230 [V]	+/- 5%	198 - 242 ≡	Not available
460 [V]	+/- 10%	Not available	414 - 506 Y [V]
Other [V]	+/- 5%	-	-

Fig. 8

16. INFORMATION ON AIR-BORNE NOISE (as per EEC 89/392 p. 1.7.4.f)

The weighted sound pressure level A produced by the Filterpump does not exceed the value of 70 dB(A).


17. WASTE DISPOSAL

Before scrapping the Filterpump, make sure the lubricating oil is separated from the other components.

Do not dump lubricating oil in the environment. It must be disposed of properly.

DECLARATION OF CONFORMITY

We, **ROTORFLUSH FILTERS LIMITED**, declare under our own responsibility that our products Filterpump E8015 and E8020 conform to the Machinery Directive 89/392/CEE as modified by Directives 91/368/CEE, 93/44/CEE, 93/68/CEE, to the Low Tension Directive 73/23/CEE, as modified by Directive 93/68/CEE and to the Electromagnetic Compatibility Directive 89/336/CEE as modified by Directive 93/68/CEE.


J Hosford
Proprietor Rotorflush Filters



**USE AND MAINTENANCE
INSTRUCTION MANUAL
for
ROTORFLUSH FILTERPUMPS
Models E4004 –E8020**

For three phase pumps it is imperative that electrical connections are made so that the impellers rotate in the correct direction. If the pumps are run in the wrong direction for more than a few seconds serious damage may result which will invalidate the guarantee.

Read page 9 paragraph 12 before installation for the method of checking correct direction of rotation.

